


ELECTRIC SCHEMATIC DIAGRAM

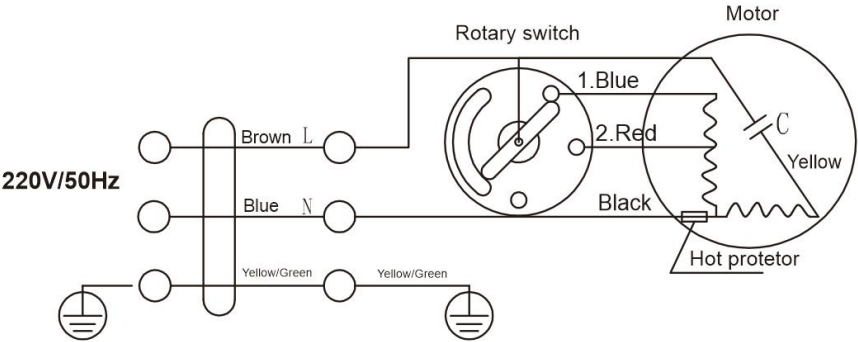

RECYCLING

For further information, please contact your local or regional authorities.


Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.



Instruction

Manual

DRUM FAN

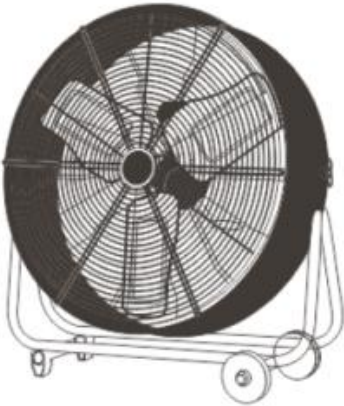

SPECIFICATIONS:

Model	Description	Voltage	Frequency	Wattage
APB-60-D1	600mm drum fan	220V	50Hz	200W

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.


BEFORE FIRST USE

Before use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for replacement.

OPERATING INSTRUCTIONS

NOTE:

- Before inserting the plug into a power outlet, make sure that the correct voltage being used corresponds to what is indicated on the rating label, and that the socket has an earth facility.
- The fan can be manually tilted up and down.

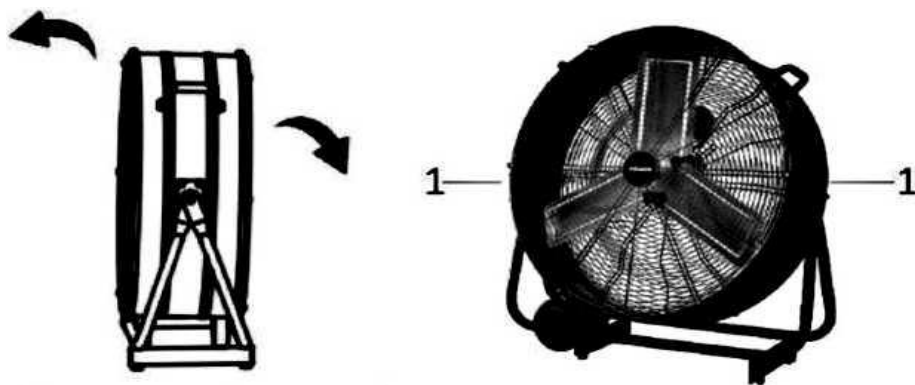

CAUTION: Select a suitable location for the fan. Always choose a safe location in accordance with the safety recommendations outlined.

1. Place the fan on a firm, secure and level surface:
 - Verify that the feet and wheels are properly positioned.
 - Verify that the area around the surface is clean, without dust.
 2. Plug the fan into a power outlet.
 3. Select the desired speed by pressing turning the knob:
 - O-OFF
 - 1-LOW SPEED
 - 2-MEDIUM SPEED
 - 3-HIGH SPEED
 4. Adjust the desired air direction by tilting the fan assembly to the required position.
- CAUTION: The fan should always be switched off when making any adjustments to the fan head angle.*
5. Once the unit is switched off, pull out the plug from the socket.

NOTE: When not in use for long periods of time, the plug must always be removed from the socket.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING: To reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Remove the unit from its packaging and check to make sure it is in good condition before using.
- Do not let children play with parts of the packaging (such as plastic bags).
- Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
- Do not let children play with parts of the packaging (such as plastic bags).
- Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
- Never install the unit where it is exposed to direct sunlight, excessive moisture/rain, dust and lack of ventilation near any heat sources.
- Avoid making contact with moving parts. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while the unit is working.
- Always place the fan on a stable, level surface when operating to prevent the fan from overturning. Do not run the power cord under a carpet. Do not cover the power cord with throw rugs or runners. Route the power cord away from walking paths so that nobody can trip over it. The cable should be kept away from heat, sharp edges and oil.